





Trc1 **S11** SWR 100 mU/ Ref 1 U Cal 1

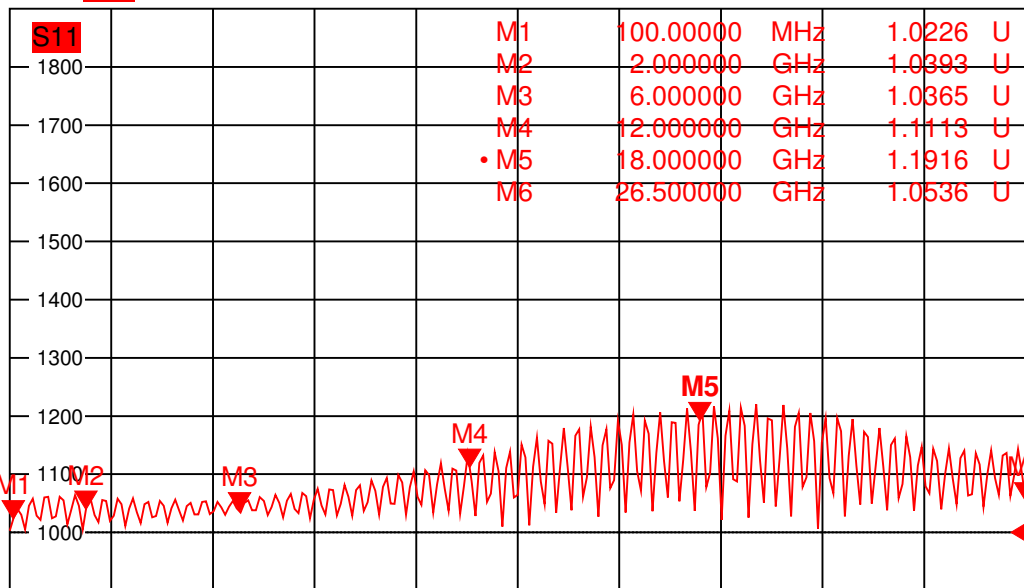


Ch1 Base Freq Start 10 MHz Base Pwr 0 dBm Stop 26.5 GHz

Trc2 **S22** SWR 100 mU/ Ref 1 U Cal 2

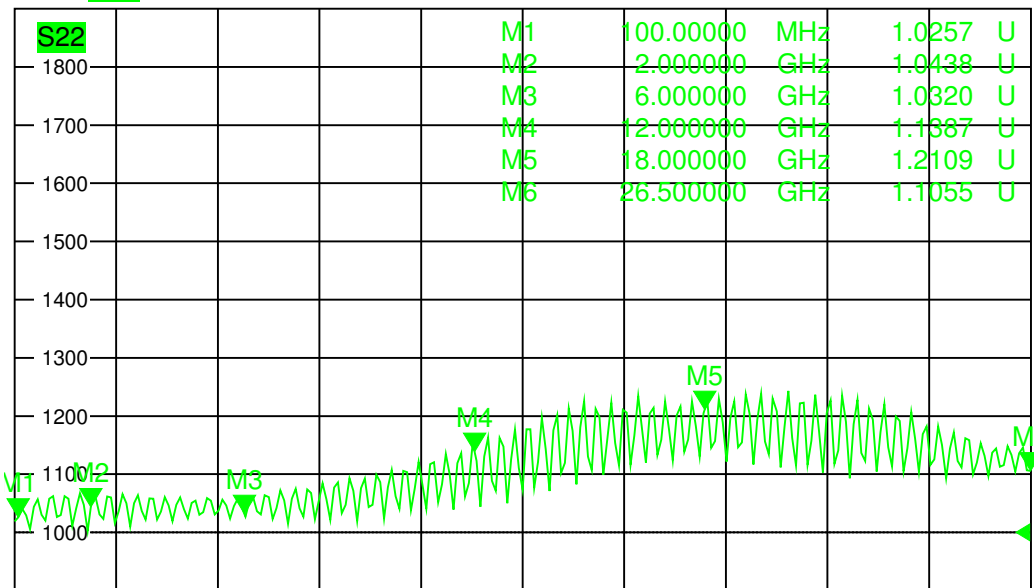

Ch1 Base Freq Start 10 MHz Base Pwr 0 dBm Stop 26.5 GHz

Trc3 **S21** dB Mag 0.5 dB / Ref 0 dB Cal ASR-CA-086-12 Cable Assembly Insertion Loss 3

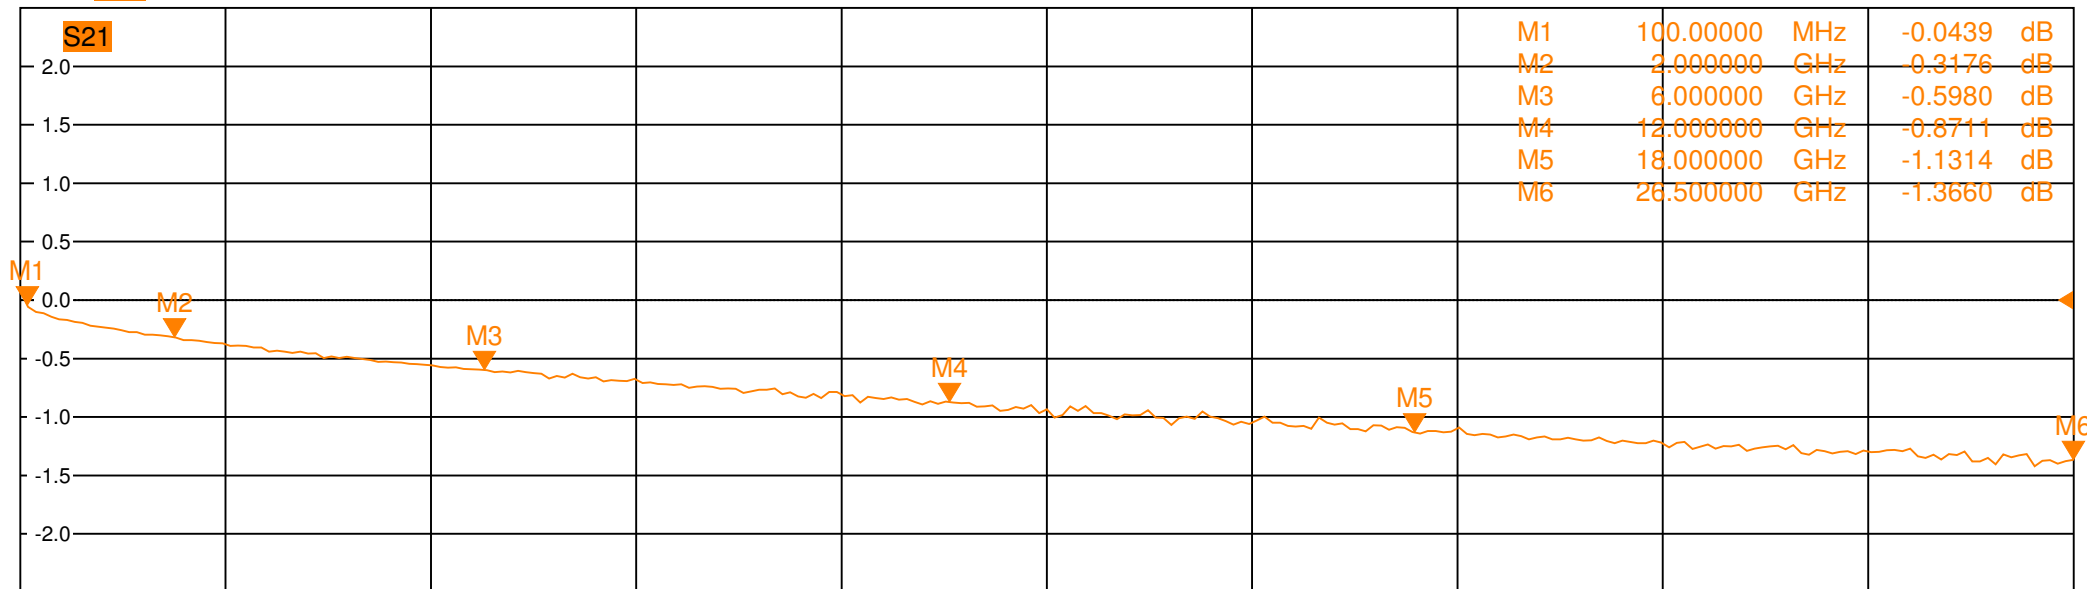

Ch1 Base Freq Start 10 MHz Base Pwr 0 dBm Stop 26.5 GHz

Marker	Freq	Unit	Value
M1	100.00000	MHz	1.0226 U
M2	2.000000	GHz	1.0393 U
M3	6.000000	GHz	1.0365 U
M4	12.000000	GHz	1.1113 U
M5	18.000000	GHz	1.1916 U
M6	26.500000	GHz	1.0536 U

Marker	Freq	Unit	Value
M1	100.00000	MHz	1.0257 U
M2	2.000000	GHz	1.0438 U
M3	6.000000	GHz	1.0320 U
M4	12.000000	GHz	1.1387 U
M5	18.000000	GHz	1.2109 U
M6	26.500000	GHz	1.1055 U

Marker	Freq	Unit	Value
M1	100.00000	MHz	-0.0439 dB
M2	2.000000	GHz	-0.3176 dB
M3	6.000000	GHz	-0.5980 dB
M4	12.000000	GHz	-0.8711 dB
M5	18.000000	GHz	-1.1314 dB
M6	26.500000	GHz	-1.3660 dB